


In order to access this page you need to connect to the QD2040 using the same Ethernet network (LAN or WAN) to which the QD2040 is connected.

Note: This page is NOT accessible from the internet.


### Steps:

1. Login to the QD2040 with a web browser and the appropriate static IP. Enter the IP address into the web browser's location bar and the login screen (shown to the right) should appear.

**Username: admin**  
**Password: password**

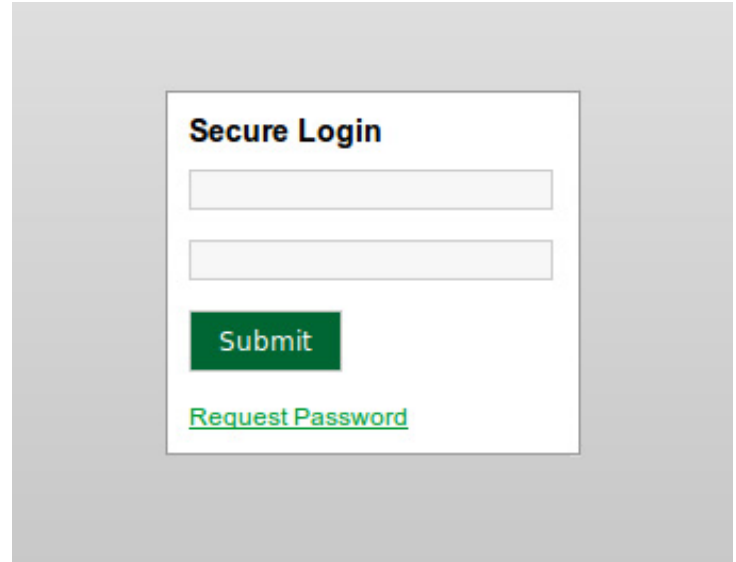

2. Click on the "View Alarms Link" toward the top of the page. This should take you to a page which has the complete top level menus showing.

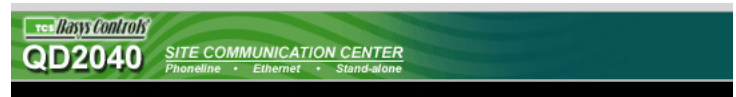

Mon Sep 8th 8:14:46 am 2014 CST

## QD2040 Setup

[View Alarms](#) [Reset Unit](#) [Check For Update](#)

### Installation Data ▾

Installer Name:

Installer Contact Phone Number:

### Identity ▾

Unit Model: QD2040

Application Version: 05.02.21

Hardware ID: Q0000005

Hardware Version: 212

OS: FC8


MAC: 00155817BB98

Site Code:

Site Name:



### Location ▾

3. Click on the "Admin" menu item. Then click on the "My Info" sub menu item.

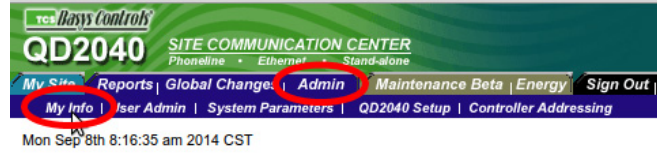

4. Enter the old password (in the current password field) and the new password twice (new password and confirm new password fields). Then click submit to update the password.

Note: Passwords have a max length of 15 characters.

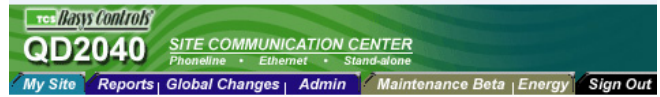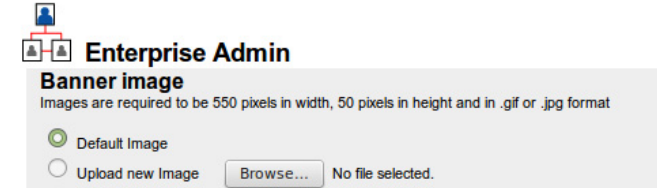

**My Info**

Name: Real\_Name  
Title:  
Email:  
Phone Number:

If any corrections need to be made, please contact your administrator:  
[ubiquity@tcsbasys.com](mailto:ubiquity@tcsbasys.com)

Login Name:	admin
Current Password:	<input type="password"/>
New Password:	<input type="password"/>
Confirm New Password:	<input type="password"/>