

**Symptom:**

The QD2040 is not auto restarting.

**Cause:**

The QD2040 is not auto restarting. The jumper is not placed over both pins.

**Solution:**

1. Shut down QD2040 press and hold the power button, the POWER LED will go out.



2. Squeeze and pull up each end of the cover to gently remove.




3. Locate the autostart jumper.



Notice the jumper is only covering 1 of the 2 pins



4. Remove the jumper.

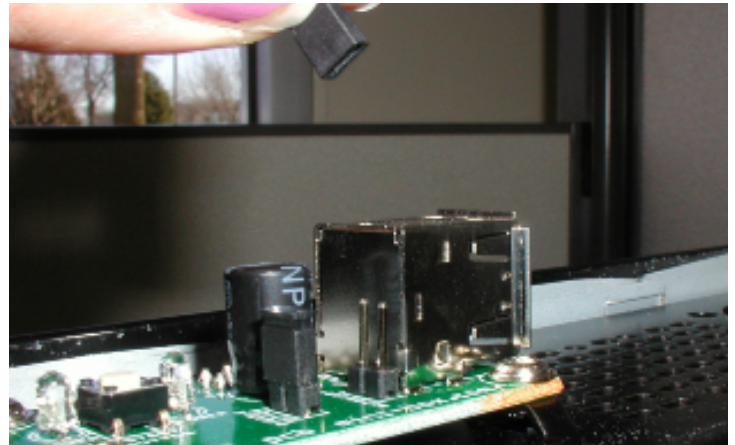

5. Place jumper over both pins and push down until it hits the base

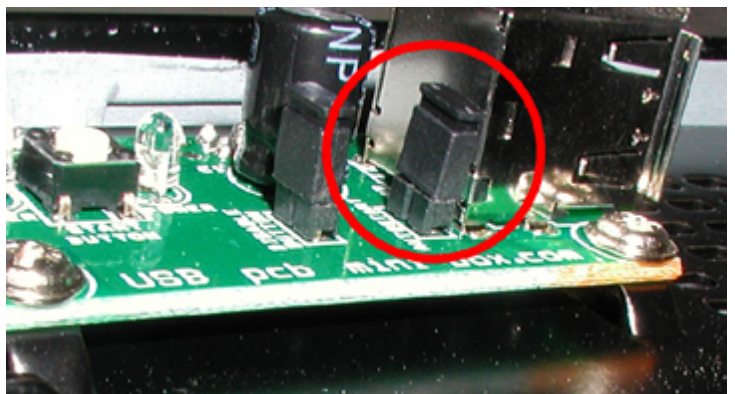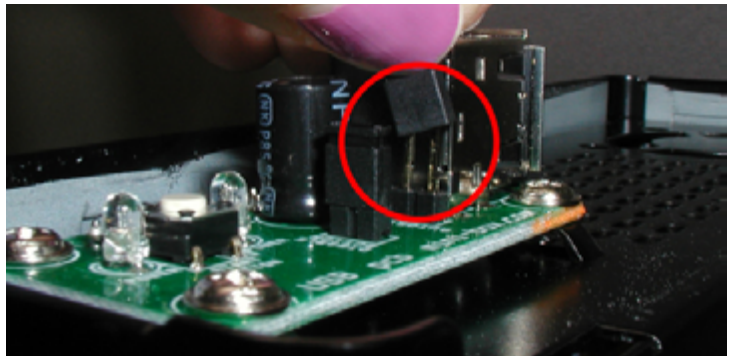

6. Replace the cover.

7. Power up unit.