

#### **DESCRIPTION**

The FS1-6 paddle flow switch is designed to prove liquid flow in a wide variety of HVAC and industrial applications. The corrosion-resistant flow switch is mounted in a weather-resistant box for simple wiring connections. The polyphenylene sulfide plastic vane is field trimmable for 1" (2.54 cm) and larger pipes, and it is magnetically coupled to the SPDT switch to prevent liquid from entering the switch housing.

## **FEATURES**

- · Weather-resistant construction
- Simple installation
- Leak-proof magnetic switch operation
- Field adjustable for 1" (2.54 cm) and larger pipes
- · SPDT snap-acting switch

### **SPECIFICATIONS**

**Contact Arrangement** SPDT; black wire = common, red

wire = normally open (at no flow), blue wire = normally closed (at no

flow)

**Contact Rating** 5A @ 125/250 VAC

Wiring 18" (46 cm) leads, 18 AWG Pipe Size Range 1" to 12" (2.5 to 30 cm)

Connections 1" MNPT Media Temperature Range

212°F (100°C) maximum

**Maximum System Pressure** 

150 psig (1 bar)

**Materials Of Construction** 

Wetted parts: Polyphenylene sulfide vane, ceramic 8 magnet, 316 stainless steel spring and pin

1 lb (.45 kg)

Warranty 1 year

## **WIRING**

Weight

Black - Common


Red - Normally open (no flow)

Blue - Normally closed (no flow)





# **DIMENSIONS**

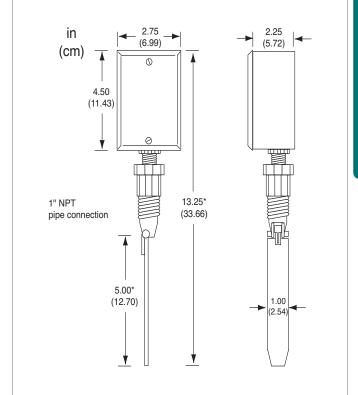

\* Dimension with vane full length for 6" and larger pipe installation



### **INSTALLATION**

- 1. Carefully unpack switch, making sure to remove any packing from the lower housing. Adjust the actuation or deactuation point by trimming the vane to the length desired. If using a pipe with weld-o-let, cond-o-let, or plastic PVC fittings, use graduations indicated on the vane. If using standard 125 or 250 lb (57 or 113 kg) bronze, iron, or steel fittings, trim the vane 0.125" (0.32 cm) above the marking provided. Because of the great variation in fittings and process connections, it is recommended the unit be checked when installed to ensure proper operation and that there is no interference between the vane and the fittings. For pipes larger than 6" (15.24 cm), leave the vane full length.
- 2. This flow switch is intended to be used in clean process media where particles, scale, and debris are not present. Buildup of such materials may cause inaccurate signals.
- 3. The switch must be indexed during installation in the line with the flow arrow on the side of the switch pointing in the direction of the flow. Pipe sealant is required at the 1" NPT thread connection. It is important to not get the sealant in the vane assembly as it may prevent proper operation and cause misleading signals. When installing the unit, be certain not to over-torque the housing. Damage may occur if excessive force is used.
- 4. Connect the switch wires in accordance with local electrical codes. The FS1-6 is not intended to be a load-carrying conduit connection. Loads may damage the switch and stop operation.

### **PERFORMANCE**

PIPE	ACTUATION	DEACTUATION
SIZE	gpm (lpm)	gpm (lpm)
1	10.7 (40.5)	9.3 (35.2)
1.25	9.5 (36.0)	7.7 (29.1)
1.5	8.1 (30.7)	6.3 (23.9)
2	9.8 (37.1)	8.5 (32.2)
3	12.4 (46.9)	8.9 (33.7)
4	20.2 (76.5)	12.7 (48.1)
6	43.0 (163)	32.8 (124)
8	74.2 (281)	56.6 (214)
10	116.7 (442)	89.0 (337)
12	167.1 (632)	127.4 (482)

### ORDERING INFORMATION

MODEL FS1-6

**DESCRIPTION** 

Weather-resistant flow switch